




Multiport valve

Before starting work ensure
electricity supply is OFF
Select Multiport valve to Closed



Locate pool 'Return' pipe

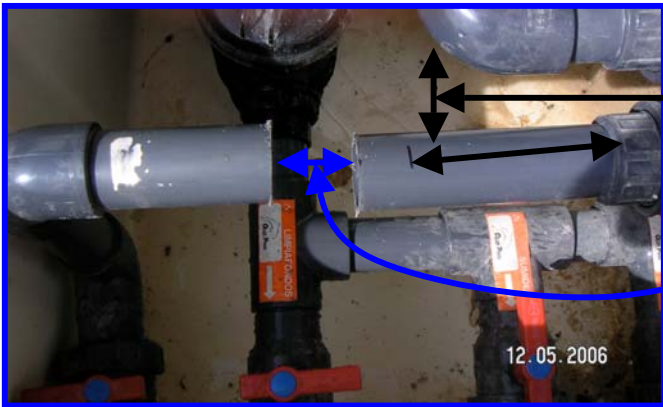

Before cutting pipe ensure enough
clearance for the cell from other
pipework

Measure for the cell 'T' piece to
locate and cut out the center section
50mm



Mount the 'T' piece and align to
allow for any obstructions - pool
box lid closing etc.



Locate the correct angle taking into account the pool box lid closing.
NOTE: Angle no more than 45degrees from vertical



Fit cell to 'T' piece – use Vaseline and rubber gloves to ensure the cell is tight and leakproof

Multiport valve in closed position




Measure and locate suitable position for the power supply and fit bracket.
Put sealant on any screws that pass through the box if there is any possibility of water coming through

Note venturi position



Example of cell mounted where position was difficult.

Note path of extra pipework

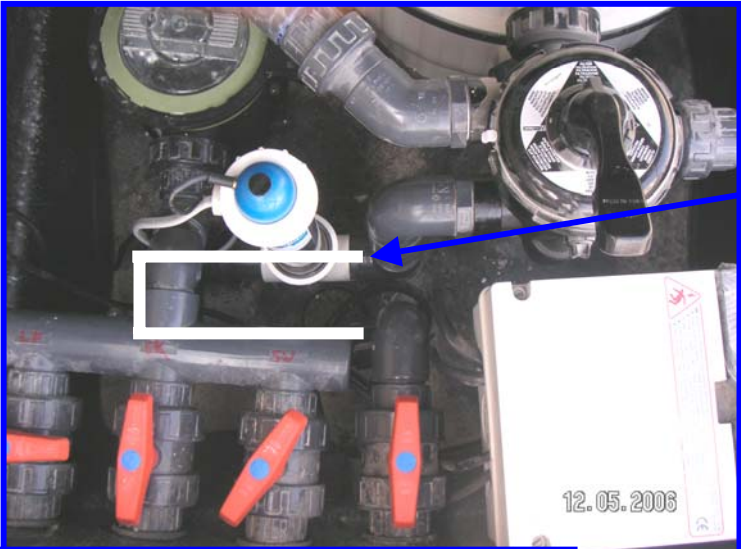

Pipe passes under manifold

